Whirlpool Europe
Customer Services

Whirlpool

Service Manual

Freezer
AFG 323/G/WP

Model AFG 323/G/WP
Version 8549 323 01070

	Page
Technical data	2
Spare part list	3
Exploded view	4
Circuit diagram	5

This documentation is only intended for qualified technicians who are aware of the respective safety regulations.

Date: 28.02.1996 Subject to modification
Document-No.: 4812 710 11741

Technical data

Dimensions

Height	180,0	cm
Width	59,2	cm
Depth	60,3	cm

Capacity

Total

brut	332	l
net	283	l

Electrical connection

Voltage	220 - 240	V
Frequency	50	Hz

Power consumption

in 24 hours	1,72	kWh

Compressor (for service)

Type	B 1118 Z	
Capacity (CECOMAF)	152	W

Cooling agent

Type	R 134 a	
Quantity	180	g

Thermostat

Switching value

Switch on temperature min.	- 19,0	˚C
Switch on temperature max.	- 27,5	˚C
Switch off temperature min.	- 23,5	˚C
Switch off temperature max.	- 32,0	˚C

Freezing capacity

in 24 hours	29,0	kg

Spare part list

Model **AFG 323/G/WP**
Service No. **854932301070**
Version **854932301070**

Pos. No.	12NC Code	Description	from	to
012 1	**4819 528 78028**	Roll		
012 2	**4819 535 38013**	Axle		
041 0	**4819 417 19122**	Hinge		
041 1	**4819 417 19121**	Hinge		
041 2	**4819 417 19358**	Hinge		
041 4	**4819 417 19359**	Hinge		
045 5	**4819 535 38056**	Shaft		
045 8	**4819 535 38061**	Pin for hinge		
045 9	**4819 535 38093**	Extension piece		
047 0	**4819 532 68438**	Bushing		
047 1	**4819 532 68437**	Bushing		
071 0	**4819 442 68023**	Frame kickplate		
071 2	**4819 460 49518**	Small plate		
071 4	**4819 458 58257**	Grid,air		
101 0	**4819 442 29999**	Door		
105 2	**4819 466 98465**	Spacer		
105 6	**4819 532 68476**	Bushing		
111 0	**4819 498 69839**	Handle,door		
111 1	**4819 462 79466**	Cover		
156 0	**4819 418 78418**	Tray		
191 1	**4819 466 69333**	Gasket		
231 1	**4819 466 88956**	Cover sensor		
231 2	**4819 466 89101**	Clamp thermost.		
233 1	**4819 404 78692**	Support		
233 9	**4819 404 78691**	Support		
241 5	**4819 442 29757**	Door,flap		
242 7	**4819 458 19935**	Drawer		
242 9	**4819 458 19936**	Drawer		
253 0	**4819 280 18025**	Door lock		
263 0	**4819 462 38537**	Rail f.basket		
263 2	**4819 404 78614**	Support		
263 3	**4819 404 78615**	Support		
263 4	**4819 404 78635**	Support		
263 5	**4819 404 78636**	Support		
263 6	**4819 535 98485**	Shaft		
301 0	**4819 452 99175**	Front		
301 2	**4819 404 78644**	Support		
301 3	**4819 349 38155**	Control panel		
301 4	**4819 452 99159**	Front,panel		
301 5	**4819 462 79187**	Cover		
301 6	**4819 462 79189**	Stopper		
324 0	**4819 460 78048**	Small plate		
332 0	**4819 410 28611**	Push button		
335 0	**4819 411 28802**	Knob thermostat		
335 3	**4819 462 79642**	Upper, front		
402 0	**4819 360 38625**	Compressor B1118Z		
402 4	**4819 404 48991**	Clip		
493 0	**4819 462 79046**	Lid f. connection block		
554 0	**4819 271 28823**	Thermostat		
561 0	**4819 282 28588**	Protect,motor		
561 2	**4819 290 68198**	Case		
614 0	**4819 280 68212**	Relay		
620 2	**4819 276 18256**	Button		
633 0	**4819 466 98682**	Arret f.door		
691 0	**4819 310 39195**	Probe		
740 0	**4819 511 48542**	Condenser		
745 0	**4819 511 38578**	Evaporator		
764 0	**4812 480 28007**	Dryer 15 g		
781 0	**4819 532 28145**	Defroster plug		
781 1	**4819 418 49577**	Gutter		
903 0	**4819 535 18117**	Stopper		
934 2	**4819 492 68431**	Spring		
993 3	**4819 462 38692**	Slide		
993 4	**4819 442 29733**	Ice pack		
993 8	**4819 462 38693**	Slide		

Exploded view

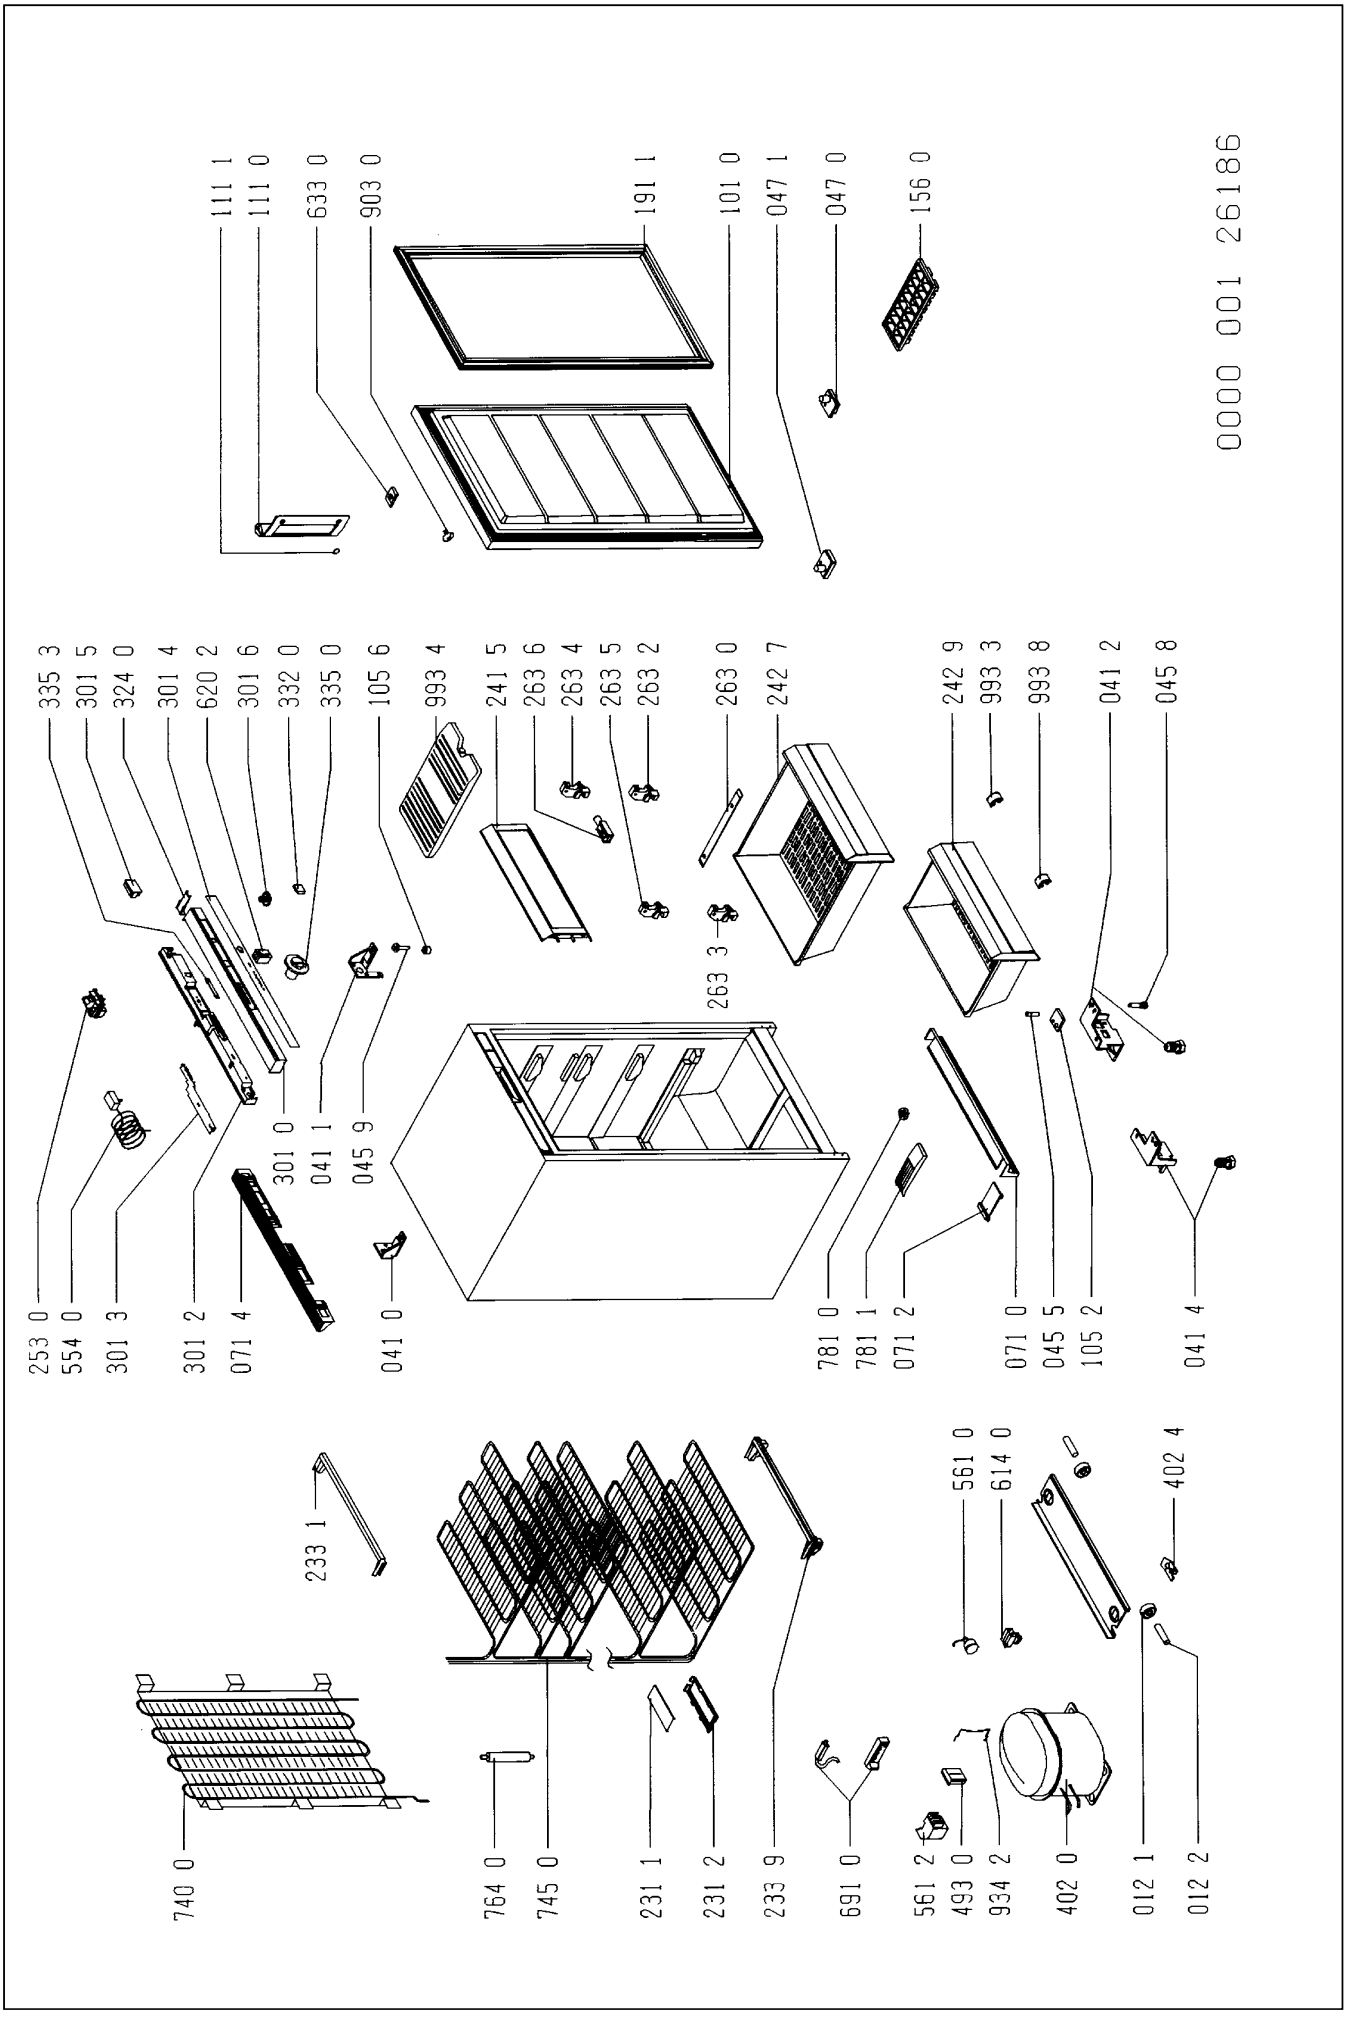

Circuit diagram

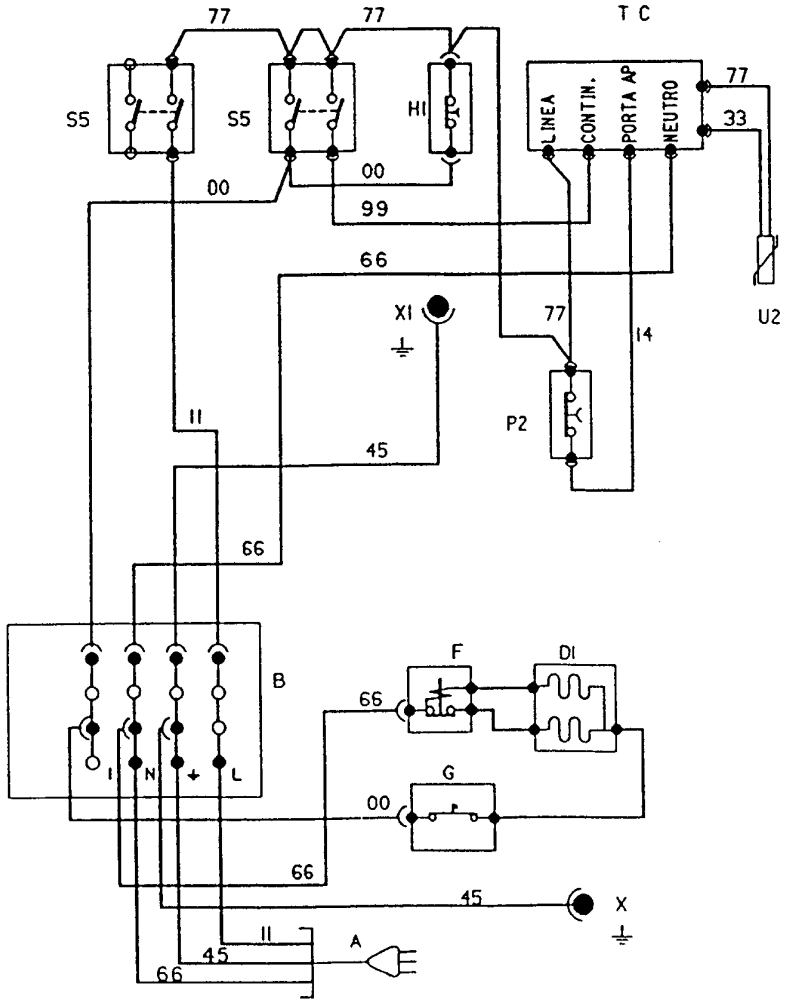

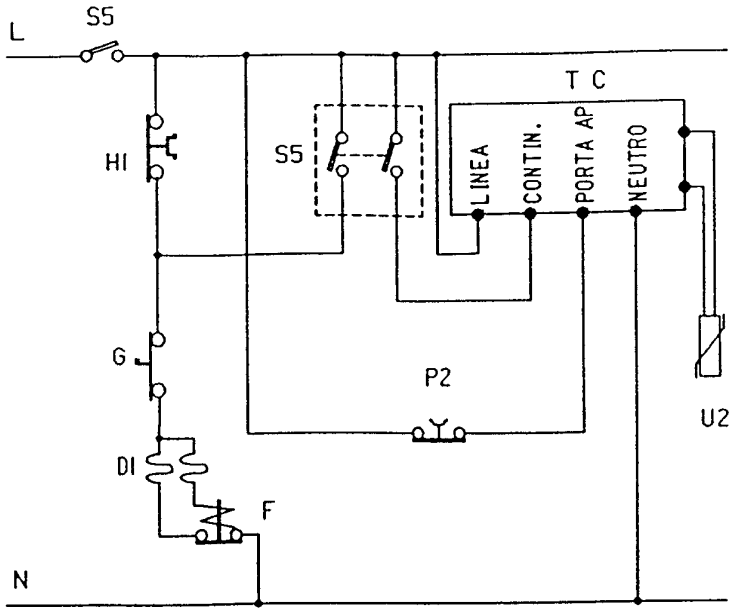

A	PLUG
B	CONNECT BLOCK
C	BUZZER
DI	FREEZ. COMPRESSOR
F	STARTING REALY
G	OVERLOAD PROTECTOR
HI	FREEZER THERMOSTAT
P2	SWITCH
S5	SWITCH
T	ELECT. THERMOMETER
U2	FREEZEZ SENSOR
X	COMPRESSOR EARTHING
XI	THERMOSTAT EARTHING

00	BLACK
11	BROWN
33	ORANGE
45	YELLOW / GREEN
66	BLUE
77	VIOLET
99	WHITE

4812 710 70021

4619 500 82230